



Thank you for choosing INSPECTIS®

This product has been tested with Windows 10/11 Professional. Below you will find step-by-step instructions on how to install.

Installation shall be done with full administration privileges. You might need to disable the antivirus system of your computer temporarily during the installation.

1. Plug the provided software protection Dongle into a free USB port of your computer.
2. Run the Setup file. The installation wizard will start and guide you through the installation.
3. Uncheck USB Communication Cable Driver and Magewell PCIe Capture Drivers.

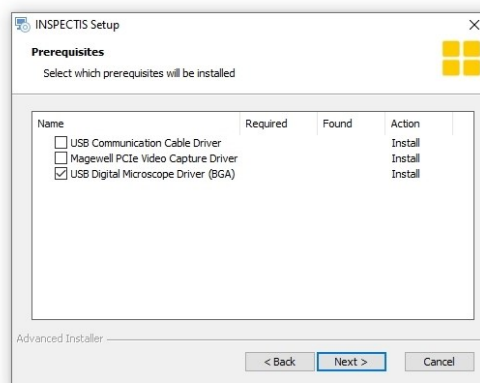

4. Digital microscope Drivers are installed automatically by installation wizard. If Drivers are already installed on your computer, uncheck the USB Digital Microscope Driver box.
5. Connect your digital microscope to a free USB3.0, USB3.1 or USB3.2 port on your computer when prompted by the wizard. At least 5.0 Gbit/s data transfer required.
6. Follow on-screen instructions to complete the installation.
7. Click on INSPECTIS  icon on your computer desktop and select **Run as Administrator first time**. Running as Administrator will enable you to register and activate the software automatically over internet.
8. Select language from the list.
9. Fill in your license number (found in the package) and the other requested information. You may select 15 days trial version for trying the software for 15 days without license registration. All software functions will be enabled for 15 days.
10. If automatic on-line registrations is not possible, complete the Off-line Registration form and email it to info@inspect-is-com to get an software activation key.
11. Follow on-screen instructions to complete the installation.

For more information please refer to instruction's manual of **INSPECTIS®** software, contact your dealer or send an email to info@inspect-is-com.