


Thank you for choosing INSPECTIS©

This product has been tested with Windows 10/11 Professional. Below you will find step-by-step instructions on how to install.

Installation shall be done with full administration privileges. You might need to disable the antivirus system of your computer temporarily during the installation.

1. Plug the provided software protection Dongle to a free USB port of your computer. The protection dongle will be found inside the product box. For 15 days trial dongle is not required.
2. Run the setup file. The installation wizard will start and guide you through the installation.
3. All device drivers will be installed automatically by the installation wizard. If drivers are already installed in your computer, or if you are not using PCIe Converter or USB Digital Microscope devices, uncheck the relevant boxes.

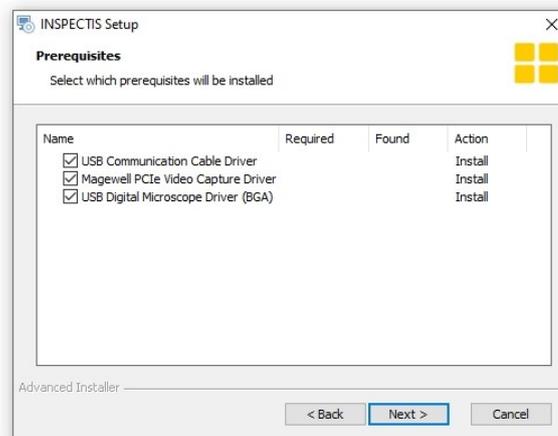

4. Follow on-screen instructions to complete the installation. Plug the USB Digital Camera (BGA) to the computer if the device is not detected by the installation wizard.
 5. Before launching INSPECTIS© software make sure your Inspectis digital microscope and USB-COM communication cable are connected to the computer.
 6. Right-click on INSPECTIS©  icon on your computer desktop and select **Run as Administrator** first time. Running as Administrator will enable you to register and activate the software automatically over internet.
 7. Select language from the list.
 8. From the "Software Version" selection window, select the INSPECTIS© software version you have ordered.
1. Fill in license number (found in the package) and other requested information. 15 days trial version for trying the software for 15 days without license.
 2. If automatic on-line registrations is not possible, complete the Off-line Registration form and email it to info@inspect-is-com to get an software activation key.

For more information please refer to instruction's manual of INSPECTIS© software, contact your dealer or send an email to info@inspect-is-com.